


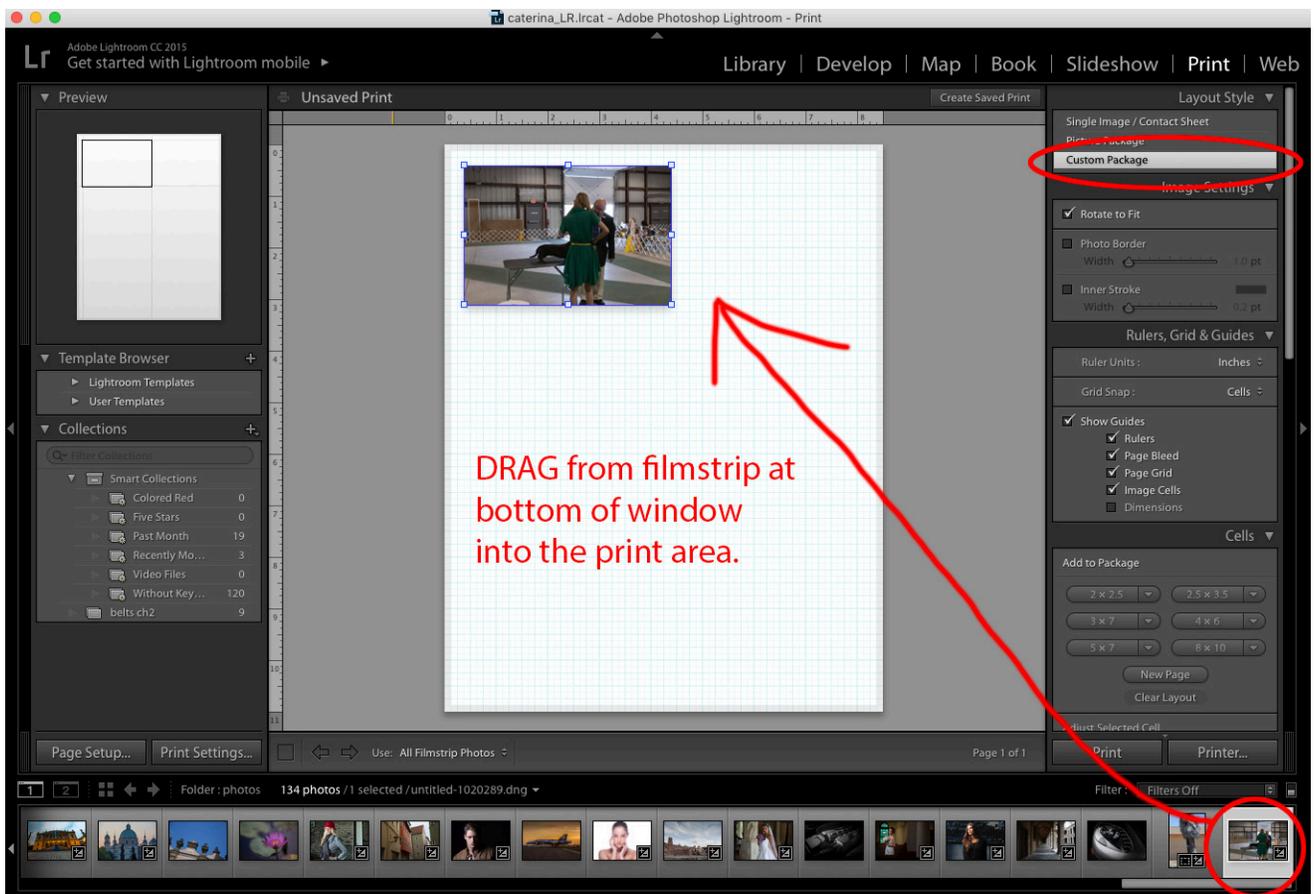


# AMY CATERINA / PALOMAR COLLEGE PRINTING FROM LIGHTROOM



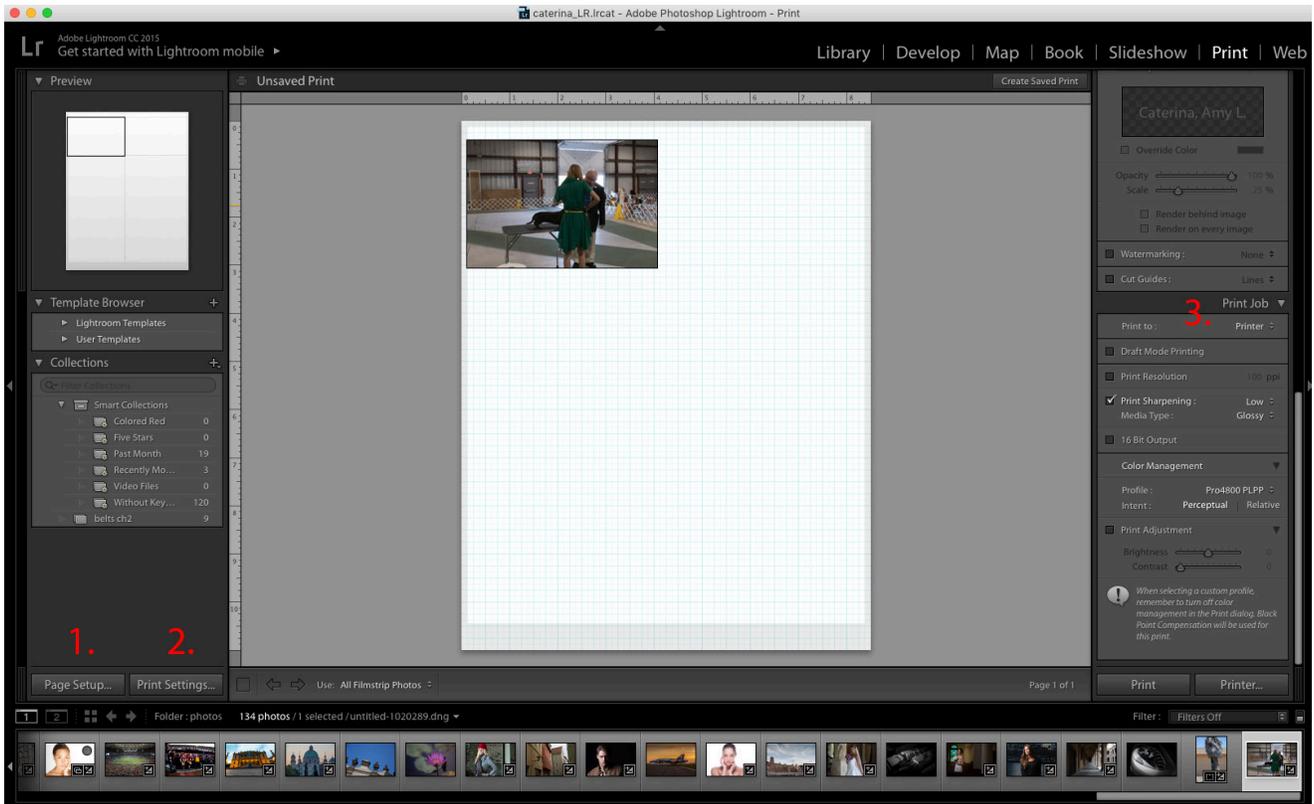


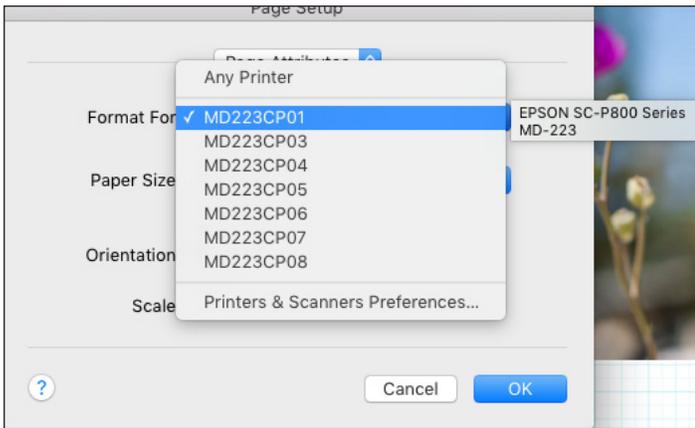

1.

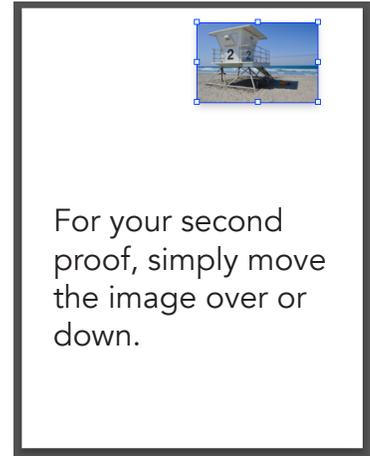

2.A-C

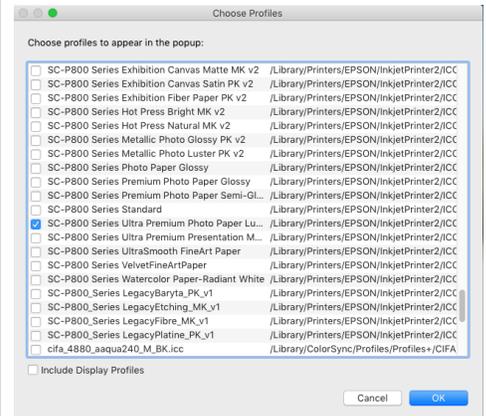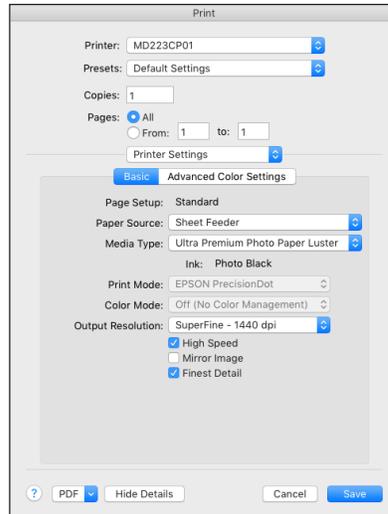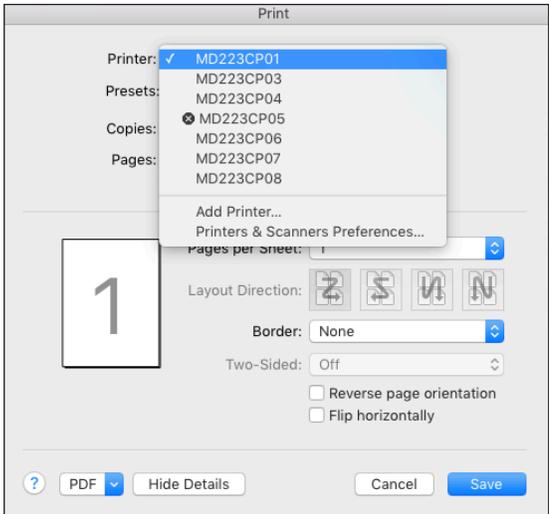

## Choose SC-P800 paper profile if you are using Epson Ultra Premium Photographic Paper Luster.

1. In Lightroom, choose the Print module, select an image from the filmstrip at the bottom and drag it onto the blank white page.
2. Under Layout Style > custom package.
3. Page Setup > choose your printer, for example MDSCP01
4. Page Setup > Paper size > 8.5 x 11
5. Print settings > Make sure printer is the number you chose in the Page Setup window.
6. Change Layout to Print Settings
7. Media type > Ultra Premium photo paper luster
8. Print mode and color mode SKIP, these settings will be disabled
9. Output > super photo 1440 dpi
10. CHECK high speed
11. On the right hand side of the Print module, navigate to Print Job.
12. Print resolution is UNCHECKED. (You set this at 100 ppi for contact sheets only.)
13. Print sharpening > Low. (This is the default.)
14. Color management > change it from managed by printer to >PROFILE > choose paper
15. Color management > intent > perceptual.
16. Scale > 25% and position in window for test print.
17. Place paper in the printer PRINTING side UP
18. Then meet me in the white box for review! Check your neutral values for a color shift.
19. Check the color using the color filters, make adjustments to color and density as needed.
20. Move the thumbnail over to the right, and print another test print.
21. When you are ready to print large, Choose maximum size from Lightroom templates on left side for final print.

